

FIG. 1

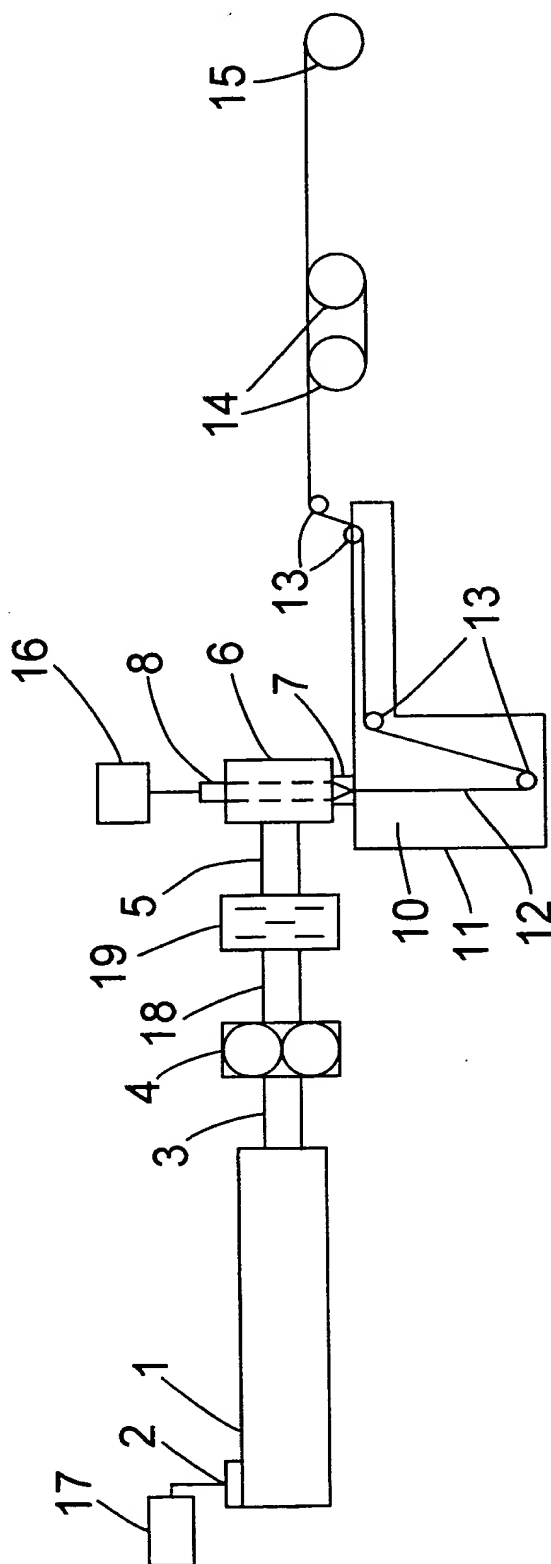


Fig.1

FIG. 2

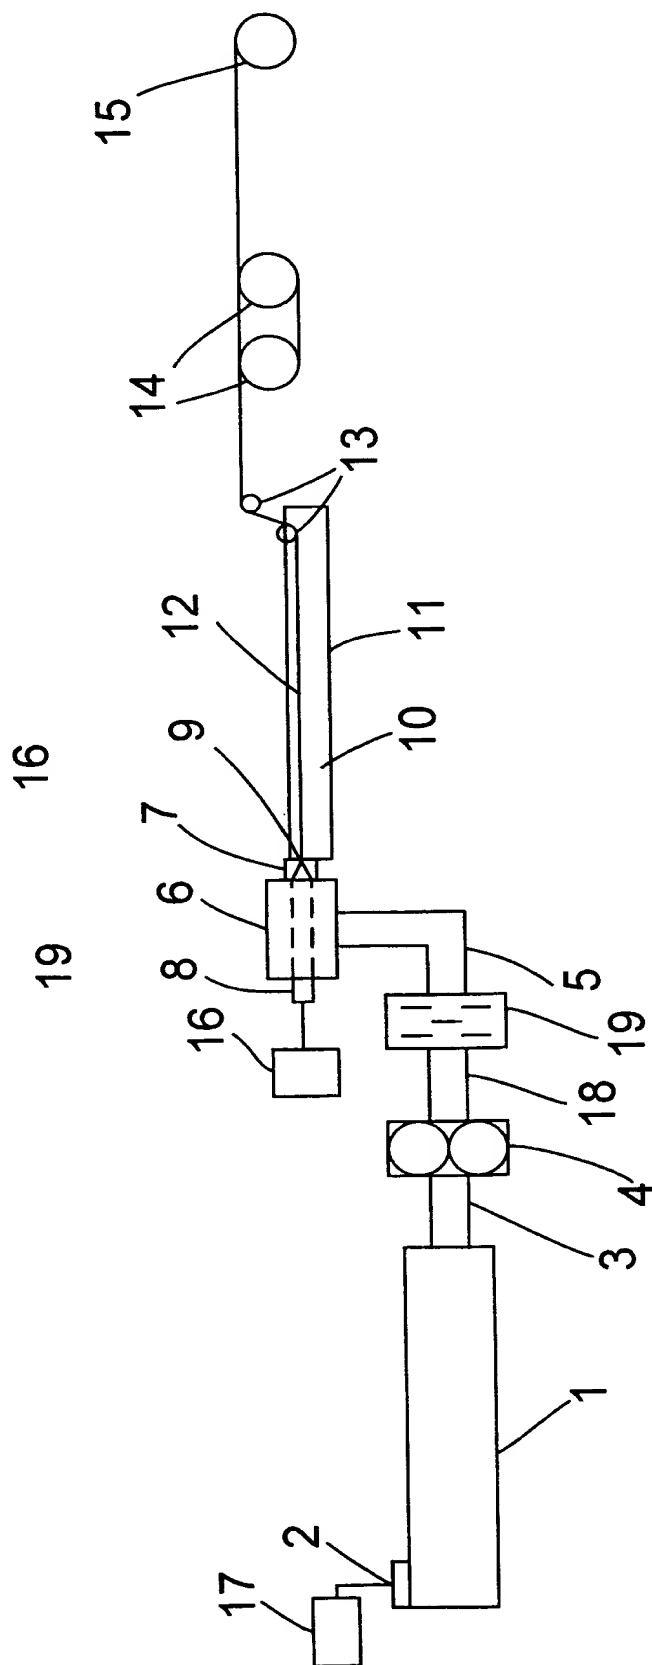


Fig.2

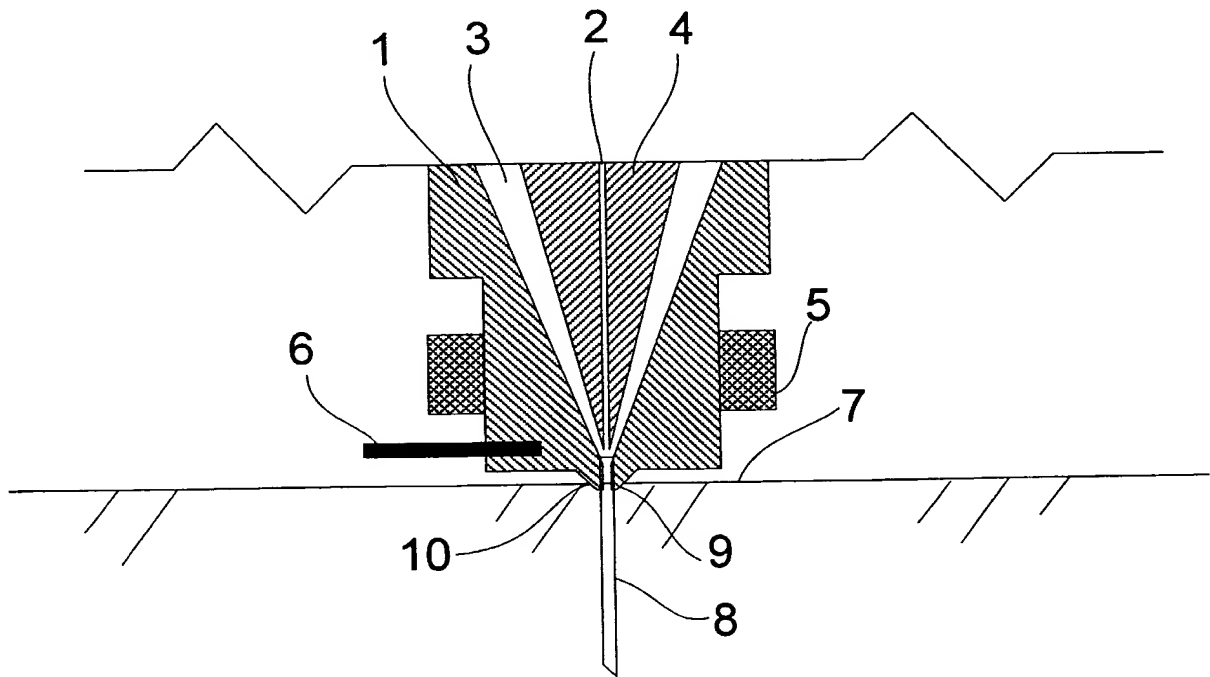


Fig.3

3/13

SUBSTITUTE SHEET (RULE 26)

FIG. 3

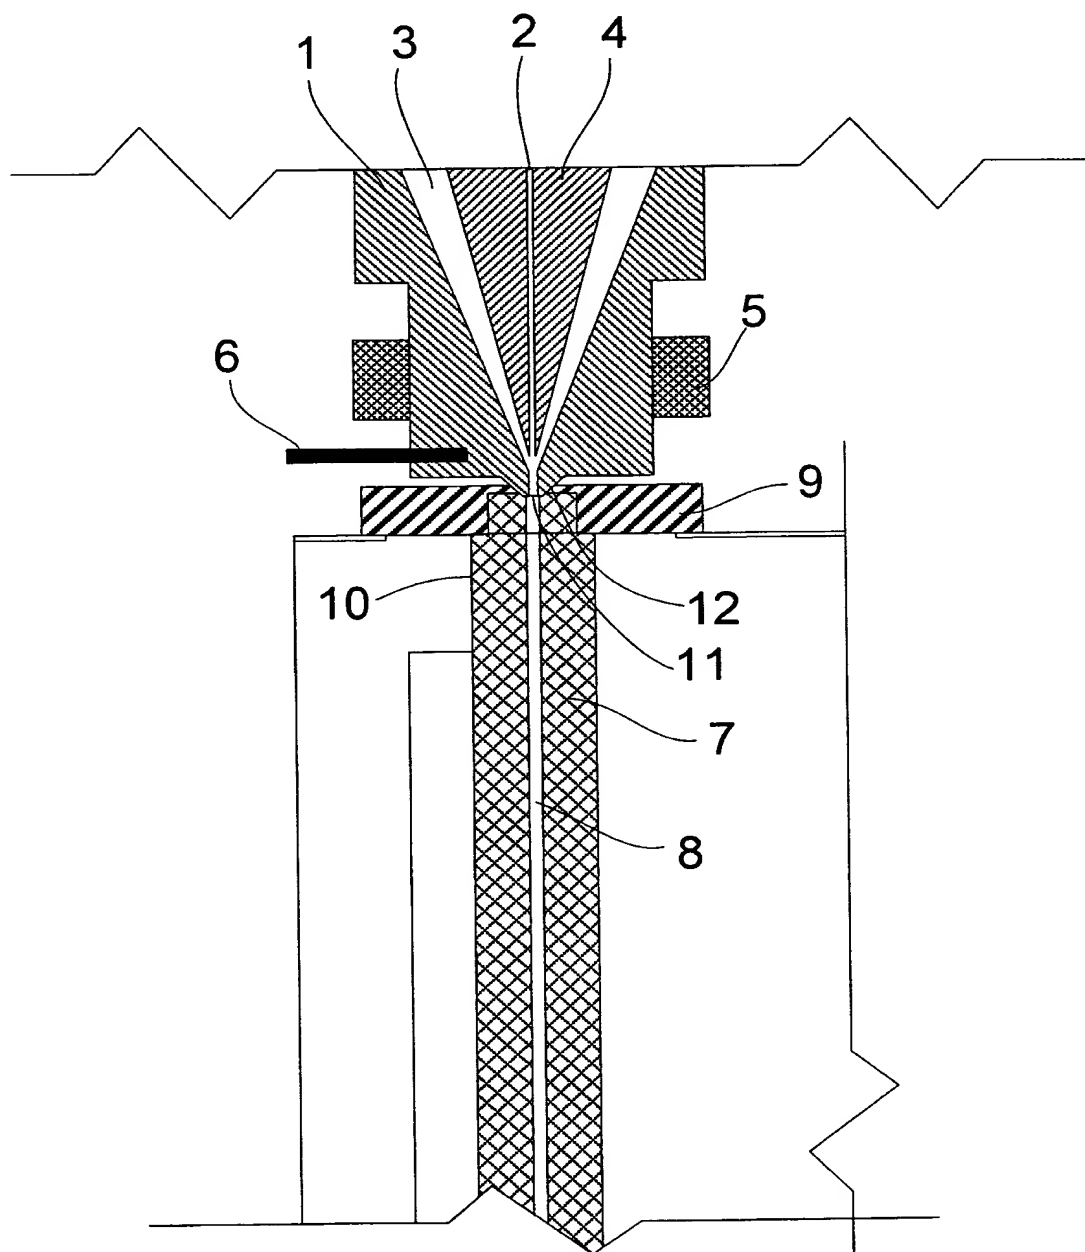


Fig.4

FIG. 5

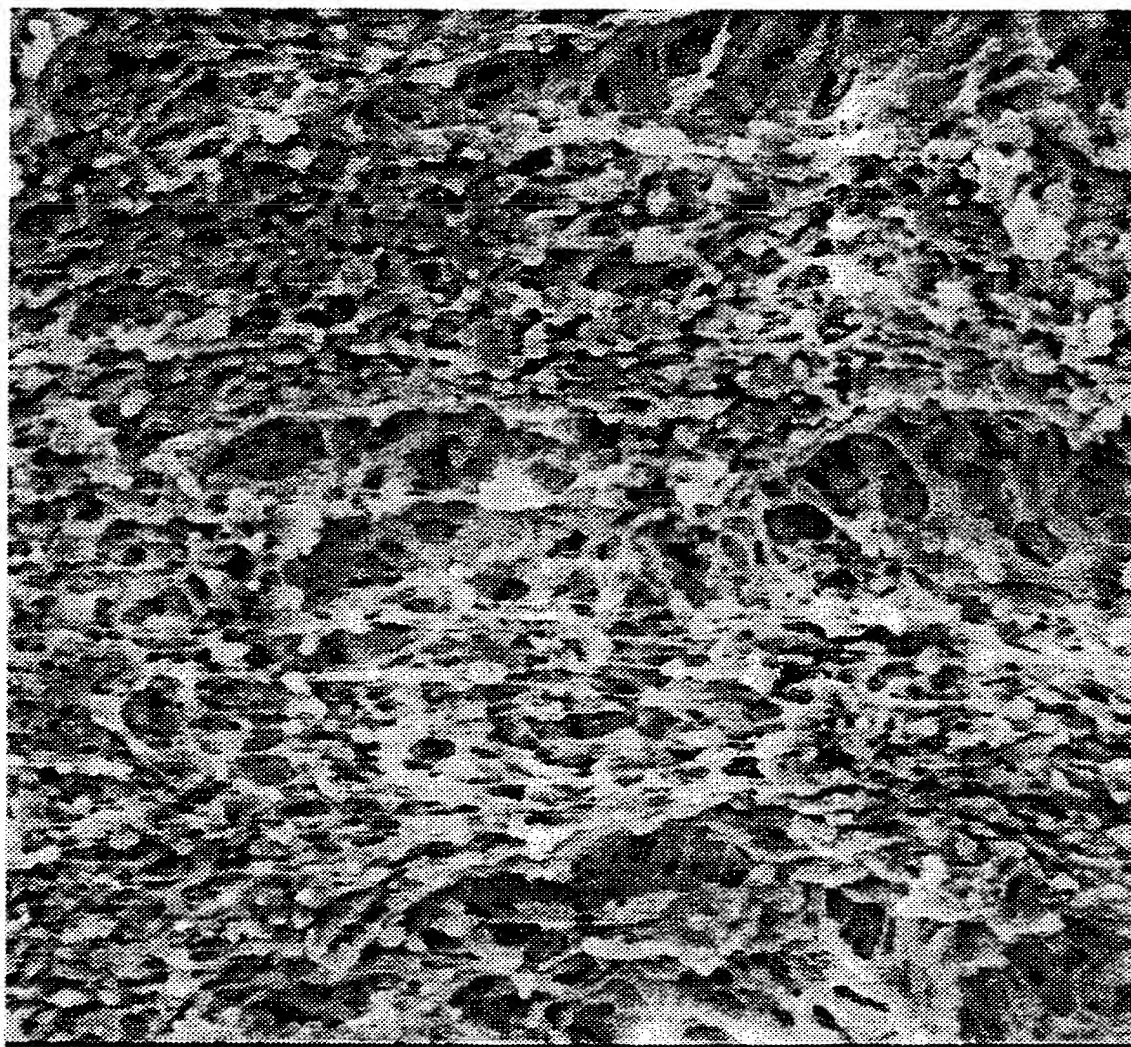


Fig.5

5/13

FIG. 6

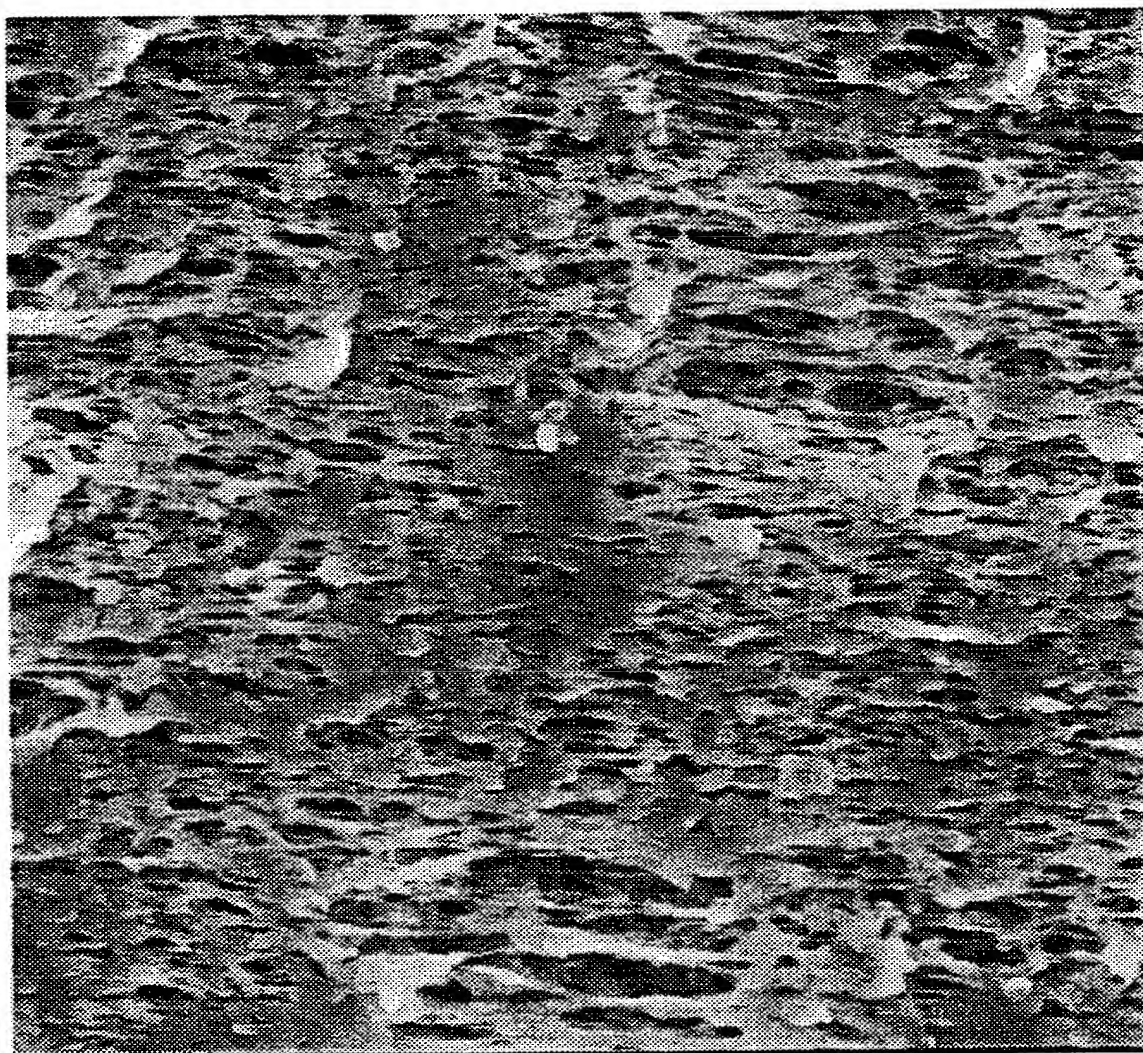


Fig.6

6/13

1092270 60106860

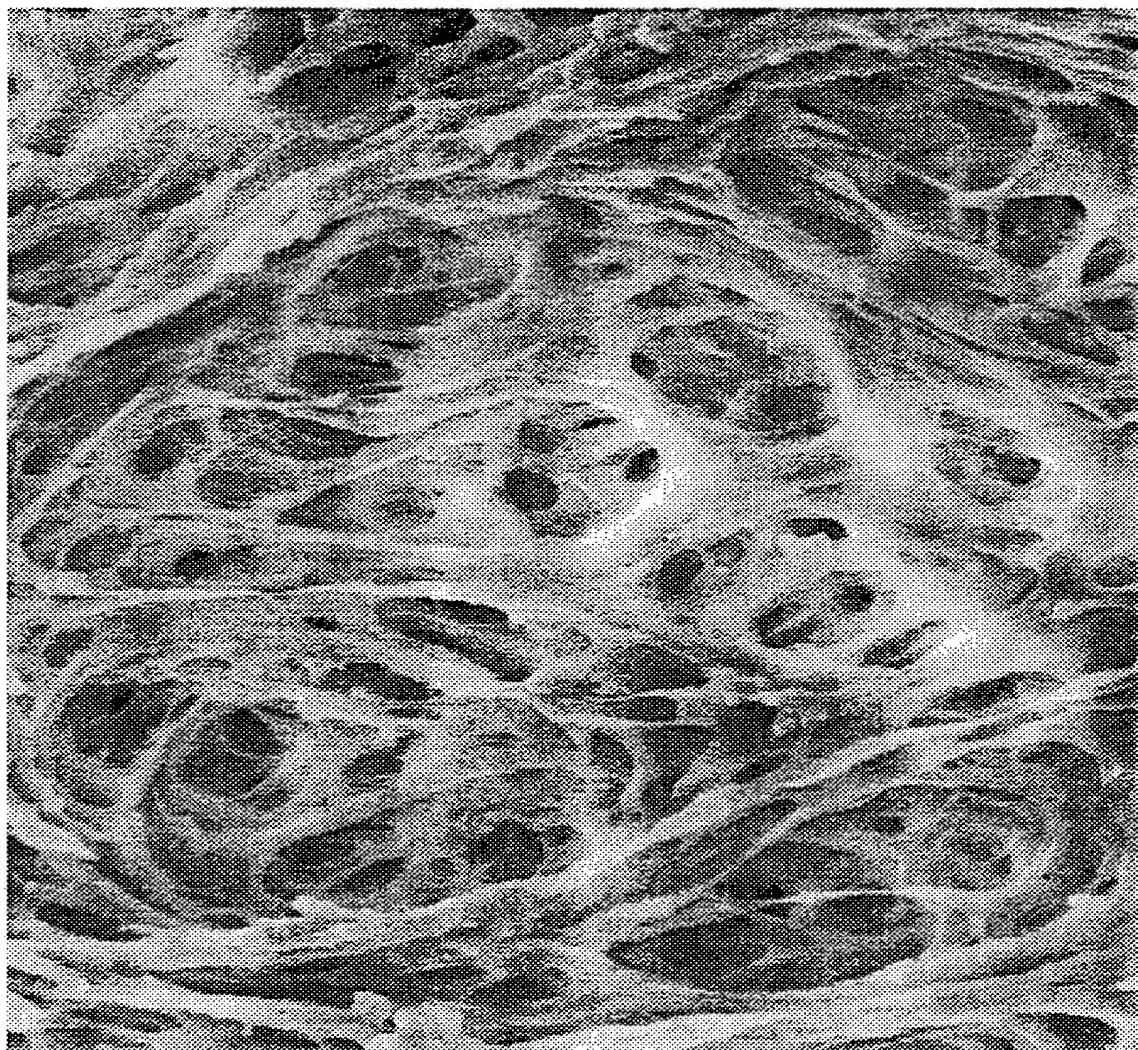


Fig.7

7/13

SUBSTITUTE SHEET (RULE 26)

T09220"60T06B60

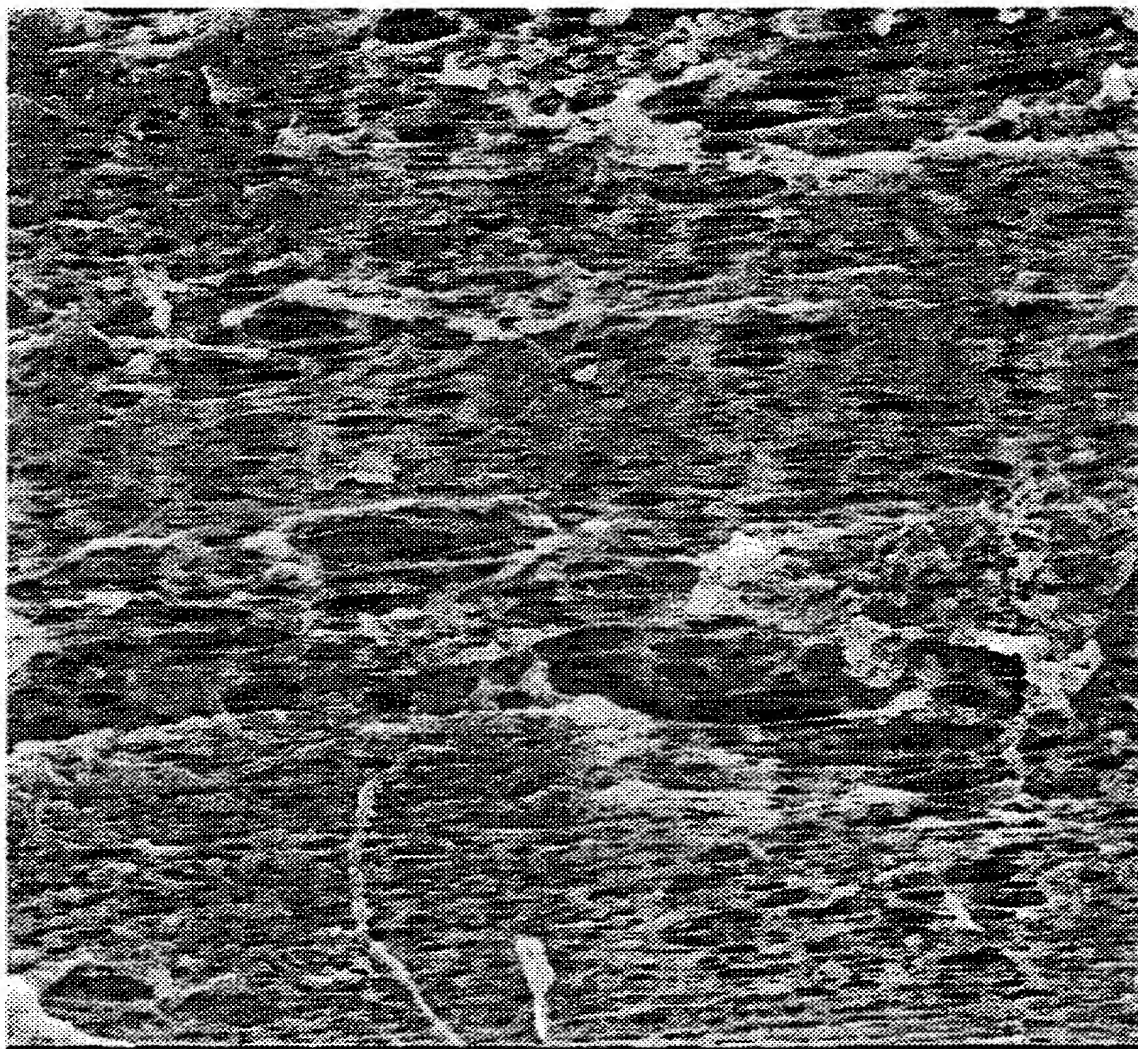


Fig.8

8/13

109220"60706860

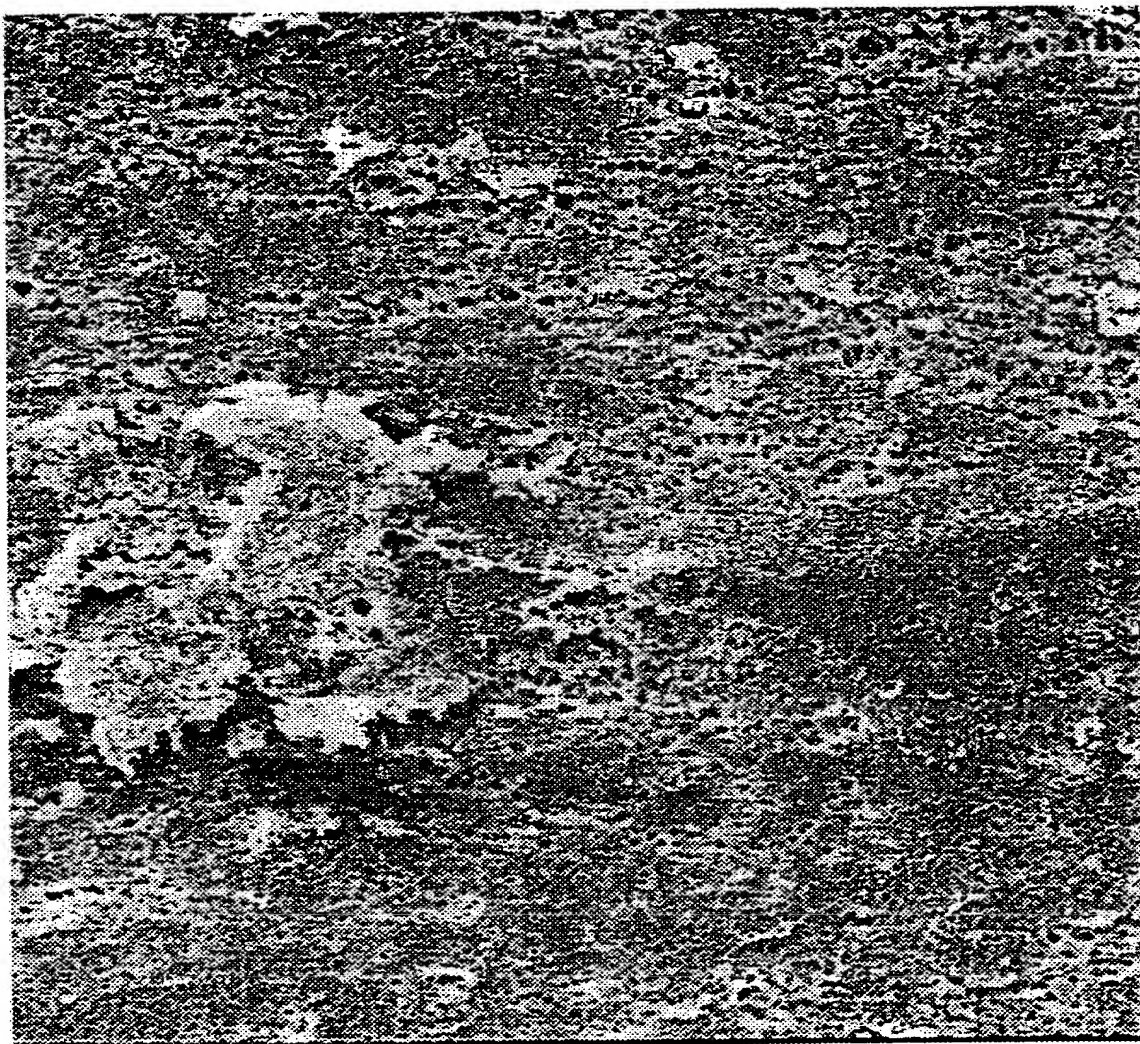


Fig.9

9/13

09890109.07604  
T09240" 60T06860

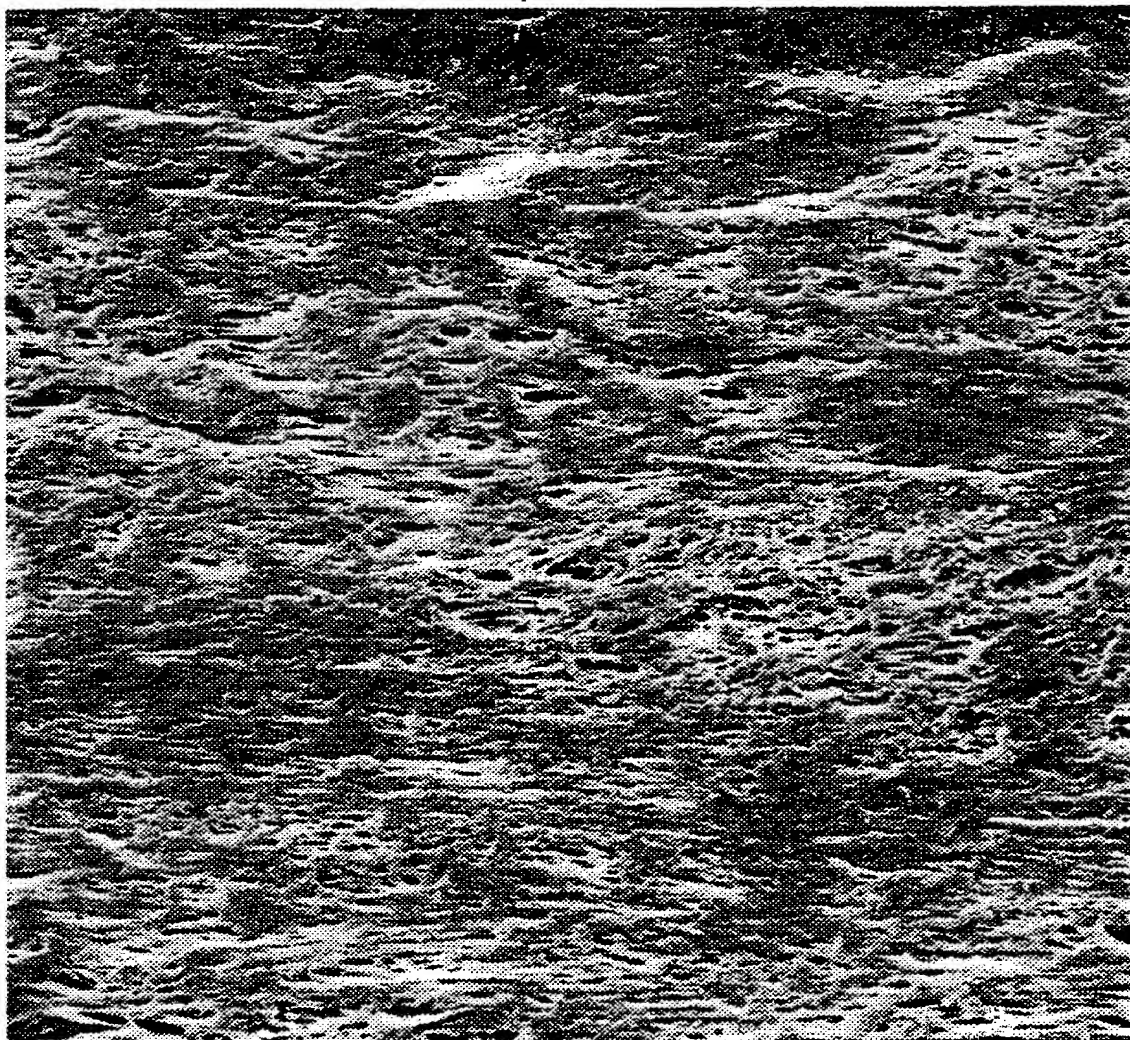


Fig.10

10/13

SUBSTITUTE SHEET (RULE 26)

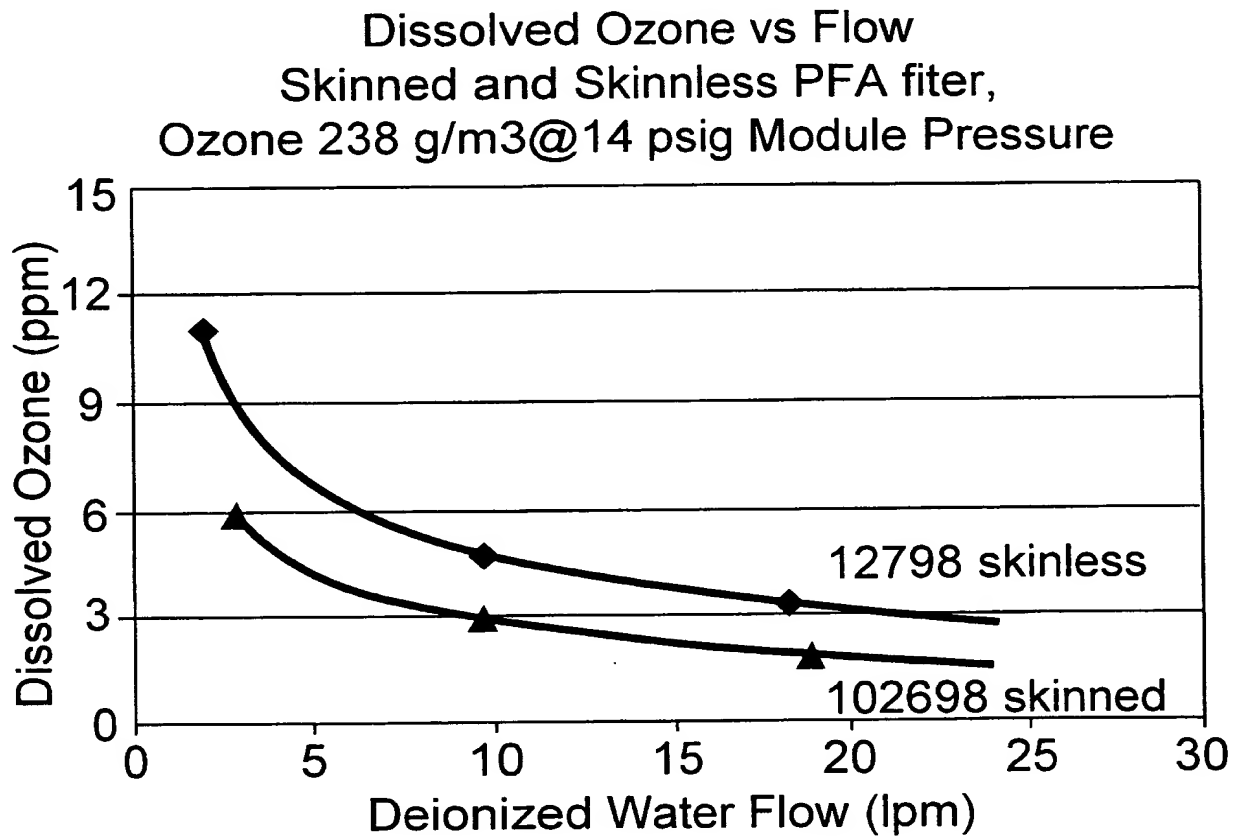


Fig.11

11/13

SUBSTITUTE SHEET (RULE 26)

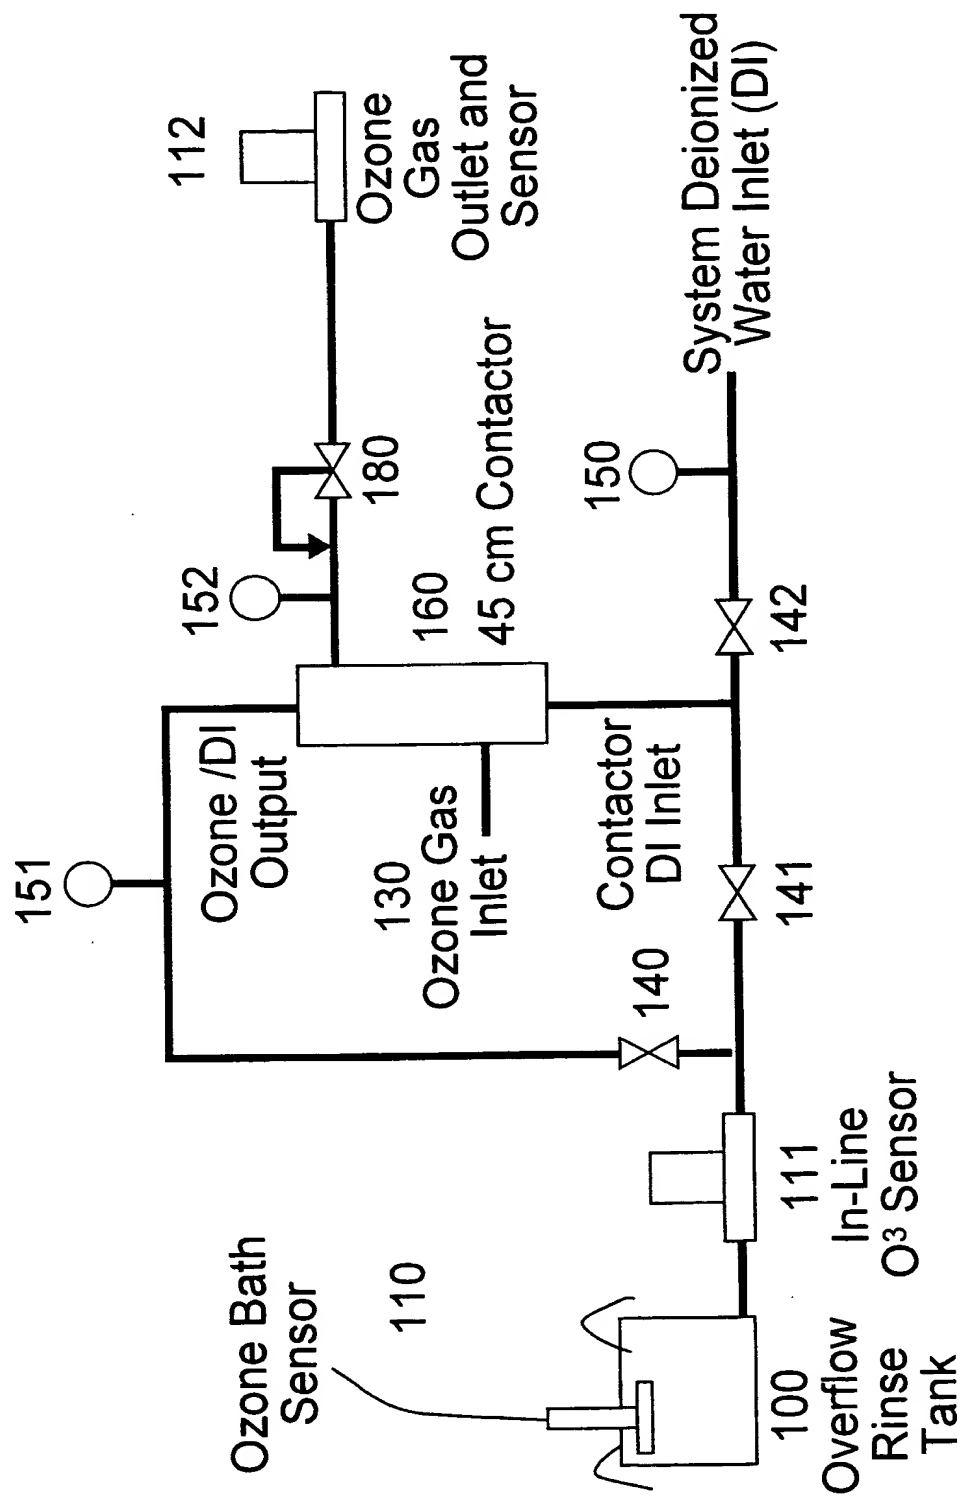


Fig.12

T09220" 60T06860

Mass Transfer Efficiency - Sh vs Pe  
PFA Hollow Fiber Skinned vs Skinless

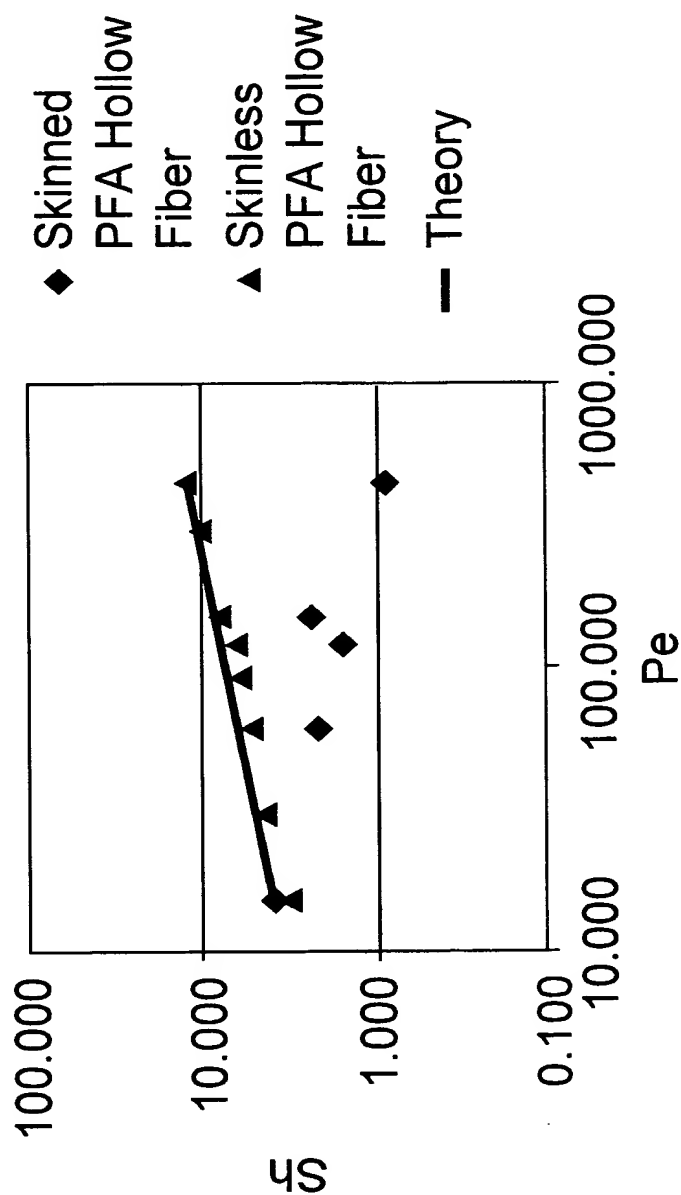


Fig.13